



RossSuper 200

Acidic detergent de-scaler for CIP

RossSuper 200 is a low foaming concentrated acidic de-scaler for use in a wide range of CIP applications in the Food and Beverage sector.

RossSuper 200 is a low foaming and non-fuming nitric and phosphoric acid detergent for effective removal of inorganic scale deposits.

It's highly economical when used with automatic dosing control systems in CIP improving operational efficiency.

Key Benefits

- Low foaming under conditions of high pressure and turbulence
- Cost effective as it's a blend of highly concentrated liquids
- Effective Inorganic deposits removal
- Also suitable with auto dosing systems

Application Method

For descaling use RossSuper 200 at concentrations between 2.5-13% w/w (2-10% v/v) at temperatures between 20 - 60°C.

It is typically used for CIP applications at concentrations between 1.0-2.5% w/w (0.8 -2% v/v) for descaling, depending upon the application and level of scale.

For more details, please contact your local Buzil Rossari representative.

Technical Data

Appearance	Clear Colorless
pH (10% solution at 25°C)	0.50 ± 1
Solid Content	7.50% ± 0.5
Specific Gravity	1.303 ± 0.1
Pack Size	30 kg



RossSuper 200

Acidic detergent de-scaler for CIP

Test Method

Available on request.

Product Compatibility

Compatible with materials commonly found in the food and beverage industry. In case of uncertainty specific tests should be undertaken.

Storage & Handling

Store in original closed containers or (where applicable) in an approved bulk tank, away from extreme temperatures. Full guidance on the handling and disposal of this product is provided in a separate Material Safety Data Sheet.

Declaration: Technical figures given in this data sheet are typical values based on internal laboratory measurements, following appropriate International Standard Methods, and should not be taken as a warranty or representation. It is the end user's responsibility to make sure that the product matches its requirements.

For more information on this product, please contact your local Buzil Rossari representative.

Buzil Rossari Private Limited

402, OMEGA, Hiranandani Business Park, Powai, Mumbai – 400 076, Maharashtra, INDIA.

Tel.: +91-22-25701619 / 67411126, Mail: marketing@buzil-rossari.com, Web: www.buzil-rossari.com



RossSuper 200

Acidic detergent de-scaler for CIP

Food Grade Quality Certificate

Application in food & beverage processing facilities

Here we confirm that, **RossSuper 200**, if used according to the instructions mentioned in the product information sheet or as intended, is suitable for the cleaning in Beverage, Brewing, Dairy & Food Processing facilities and not to adulterate the food product in any manner during its use.

Essential condition is a thorough rinsing with clear portable water of surfaces intended to get in direct contact with foodstuff.

The remaining residuals that may contaminate or adulterate food contacting cleaned surfaces are expected to be negligible, following a potable water rinse. Therefore, the potential ingestion of residues resulting from the approved use of these types of products does not represent a significant health hazard after our assessment of the products as suitable for use under the intended conditions.



Thanking you,

Yours faithfully,

For Rossari Biotech Ltd.

Please note that this is not a regulatory assessment and should not be construed as an endorsement of regulatory compliance.

MATERIAL SAFETY DATA SHEET

according to REGULATION (EU) No 453/2010, annex I

RossSuper 200

Date of issue: 10.11.2018

Page 1 of 6

1. Identification of the mixture and of the company / undertaking

1.1. Product identifier

RossSuper 200

1.2. Relevant identified uses of the mixture and uses advised against

Acidic detergent de-scaler for CIP

1.3. Details of the supplier of the safety data sheet

Manufacturer:

Manufactured under licence from buzil
ROSSARI BIOTECH LIMITED
Plot No. 10 & 11, Survey No.90/1/10 & 90/1/11/1,
Kumbharwadi, Village Naroli
Silvassa-396235
Dadra and Nagar Haveli (UT)
India

e-mail info@rossarimail.com

www.buzil-rossari.com & www.rossari.com

1.4. Emergency telephone number

+91-22-61233800/61233887

MATERIAL SAFETY DATA SHEET

according to REGULATION (EU) No 453/2010, annex I

RossSuper 200

Date of issue: 10.11.2018

Page 2 of 6

2. Hazards identification



Risk phrases :

Hazards for man and the environment : 35 - Causes severe burns.

Classification system : The classification complies with current EC regulations on dangerous substances and preparations.

3. Composition / information on ingredients

Chemical characterization

Description : Mixture in water of non-hazardous ingredients and the substances listed below.

Hazardous ingredients :

CAS: 7697-37-2 nitric acid C, O; R 8-35 30%

EINECS : 231-714-2

CAS : 7664-38-2 phosphoric acid C; R 36 5-15%

EINECS:231-633-2

Ingredients according to EC Detergents Regulation 648/2004

phosphates 5-15%

Additional information : The full text of the relevant risk phrases is given in section 16.

4. First aid measures

General information : Remove contaminated clothing immediately.

Inhalation : Remove from source of exposure. Obtain medical attention if symptoms develop. In case of unconsciousness bring patient in to stable position for transport.

Skin contact : Wash skin immediately and thoroughly with water. Remove contaminated clothing.

Obtain medical attention if symptoms develop.

Eye contact : Wash immediately with copious amounts of water and obtain medical attention.

MATERIAL SAFETY DATA SHEET

according to REGULATION (EU) No 453/2010, annex I

RossSuper 200

Date of issue: 10.11.2018

Page 3 of 6

Ingestion : Remove material from mouth. Drink one or two glasses of water (or milk) and obtain immediate medical attention.

5. Firefighting measures

Suitable extinguishing media CO₂, extinguishing powder or water jet. Fight larger fires with water jet or alcohol resistant foam. Protective equipment No special measures required

6. Accidental release measures

Protection of personnel : Wear suitable protective clothing, gloves and eye / face protection.

Environmental precautions : Dilute with plenty of water.

Method of disposal : Use neutralizing agent, Absorb onto dry or similar inert material. Dispose of the collected material according to the regulations.

7. Handling and storage

Handling (see also sections 8 and 15)

Information for safe handling : Ensure good ventilation/exhaustion at the workplace.

Information about protection against explosions and fires : No special measures required.

Storage :

Requirements for storage rooms and containers : According to local legislation.

Storage in one common storage facility : According to local legislation.

Further information about storage conditions : None.

8. Exposure controls / personal protection

Additional information about design of technical systems : No further data; see section 7.

Components with limit values that require monitoring at the workplace:

7697-37-2 nitric acid (30%)

OES (Great Britain) : Short-term value: 10 mg/m³, 4 ppm

Long-term value: 5.2 mg/m³, 2 ppm

7664-38-2 phosphoric acid (5-15%)

TLV (Europe): Short-term value: 2 mg/m³

MATERIAL SAFETY DATA SHEET

according to REGULATION (EU) No 453/2010, annex I

RossSuper 200

Date of issue: 10.11.2018

Page 4 of 6

Long-term value: 1 mg/33

OES (Great Britain): Short-term value: 2 mg/m³

Long-term value: 1 mg/33

new, IOELV, Sk

Additional information : The lists that were valid during the compilation were used as basis.

Personal Protection equipment :

General protective and hygienic measures :

Keep away from foodstuffs, beverages and food. Take off immediately all contaminated clothing.

Wash hands during breaks and at the end of work. Avoid contact with the eyes and skin.

Breathing equipment : Personal protection is not normally required. inhalation of dust, vapour or aerosol should be avoided.

Protection of hands : Chemical-resistant protective gloves made of butyl or nitrile rubber (EN 374, category III). In consultation with the supplier of protective gloves a different type of similar quality may be chosen.

9. Physical and chemical properties

Information on basic physical and chemical properties

Appearance: Clear uncoloured liquid

Odour: Characteristic

pH-value(10%): 0.50 ± 1

Melting point / melting range: ND

Boiling point / boiling range: ND

Density (25 °C): ND

Solubility in / miscibility with water: Miscible in water

Viscosity (25 °C): ND

Specific gravity: 1.303 ± 0.1

10. Stability and reactivity

Thermal decomposition / conditions to be avoided : No decomposition if used according to specifications.

Dangerous reactions : Reacts with alkali and metals

MATERIAL SAFETY DATA SHEET

according to REGULATION (EU) No 453/2010, annex I

RossSuper 200

Date of issue: 10.11.2018

Page 5 of 6

Hazardous decomposition products : No dangerous decomposition products known.

11. Toxicological information

Acute toxicity:

LD50 (oral) : Based on the toxicological classification the LD50 (oral) is estimated to be 200-2000 mg/kg. This value is of no practical significance due to the corrosive nature of the product.

Primary irritant effect:

Skin contact: Causes severe burns

Eye contact: Causes severe or permanent damage

Inhalation: Severe irritant, may cause pulmonary oedema.

Ingestion: Causes severe burns. Ingestion will lead to strong caustic effect on mouth and throat and throat and to the danger of perforation of esophagus and stomach.

Additional toxicological information:

EC classification: Corrosive.

12. Ecological information

General notes : Must not reach sewage water or drainage ditch undiluted or unneutralized. When used for its intended purpose, this product should not cause adverse effects in the environment. The information in this section refers to the undiluted product.

13. Disposal considerations

Product **Recommendation** : Dispose off observing official regulations.

European waste catalogue :

20 01 14 acids

Uncleaned Packagings Recommendation : Dispose off observing official regulations.

Recommended cleaning agent : Water, if necessary with cleaning agent.

MATERIAL SAFETY DATA SHEET

according to REGULATION (EU) No 453/2010, annex I

RossSuper 200

Date of issue: 10.11.2018

Page 6 of 6

14. Transport information

Land transport ADR/RID (cross-border)

ADR/RID Class : 8 Corrosive substances

Kemler Number : 80

UN-Number : 2031

Packaging Group : II

Label : 8

Proper Shipping Name : 2031 NITRIC ACID, SOLUTION

Maritime transport IMDG :

IMDG Class : 8

UN-Number : 2031

Label : 8

Packaging Group : II

EMS Number : F-A, S-B

Maritime Pollutant : No

Proper Shipping Name : NITRIC ACID, SOLUTION

Air transport ICAO-TI and IATA-DGR :

ICAO / IATA Class: 8

UN-Number : 2031

Label : 8

Packaging Group : II

Proper Shipping Name : NITRIC ACID, SOLUTION

Transport / Additional Information : Transport regulations include special provisions for certain classes of dangerous goods packed in limited quantities.

15. Regulatory information

Classification according to EC guidelines : The product has been classified and labeled in accordance with current EC Directives.

Symbol and hazard designation of product:



16. Other information

The information in this document is based on our best present knowledge. However, it does not constitute a guarantee or any specific product features and does not establish a legally binding contract.



Analytical Test Procedure/Method

Product	RossSuper 200	Issued On	01/05/2018
Application	Acidic detergent de-scaler for CIP	Next Review On	01/05/2023

Method of activity determination

Reagents & Apparatus

0.1N NaOH, Phenolphthalein Indicator (1% in ethanol), DM Water
Conical Flask, Glass Beaker, Burette, Weight Scale, Pipette

Method

Mix 1.5-2gm of the product with 100ml DM water in conical flask.

Add 1-2 drops of Phenolphthalein Indicator (1% in ethanol) and mix the solution well.

Titrate the solution with 0.1N NaOH till clear colourless liquid changes colour to pink, which should persist for at least seconds.

Note the burette reading (BR) and weight of sample for calculation using below mentioned formula,

Calculation

Activity % of RossSuper 200 = $(BR \times 13.37) / \text{Weight of sample}$

User concentration

Reagents & Apparatus

0.1N NaOH, Phenolphthalein Indicator (1% in ethanol), DM Water
Conical Flask, Glass Beaker, Burette, Weight Scale, Pipette

Method

- Take 10ml of user solution of RossSuper 200 in a conical flask
- Add 1-2 drops of Phenolphthalein Indicator and mix it well
- Titrate the solution in the conical flask with 0.1N NaOH till the solution colour changes from colourless to pink and persist for 15 seconds
- Take the burette reading (titre) and calculate the concentration



Calculation

w/w % RossSuper 200 = titre (mls) x 0.1375

TEST REPORT

Product revision No. & Date		:		
Product		:	ROSS SUPER 200	
Batch No		:	BR 181414	
Manufacturing Date		:	18.03.2019	
S.No.	PARAMETER		STANDARD	BATCH
1	Physical Form	:	Clear liquid	Clear liquid
2	pH 10% Solution	:	0.50 +/-1	1.01
3	Miscibility	:	Miscible in water	Miscible in water
4	Specific Gravity	:	1.303 +/- 0.1	1.301
5	Solid content (110°C, 2hrs)	:	7.50% +/- 0.5	7.05%
6	Odour	:	Characteristic	Characteristic

Note :- This is computer generated print no signature is required.

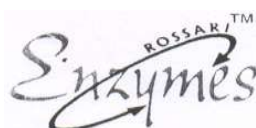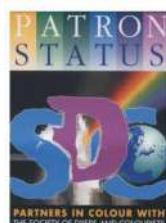

ROSSARI BIOTECH LIMITED

Plot No. 10 & 11, Survey No. 90/1/10 & 90/1/11/1, Kumbharwadi, Village Naroli,
Dadra & Nagar Haveli – 396235
Tel.: 0260-2651374/76

